

145*210mm 20/12/10

ECO-CHILL

ECO-CHILL 24 THERMO-ELECTRIC SYSTEM

USER GUIDE




SAFETY WARNINGS:

Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the rating plate of the appliance.

1. To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
2. Do not operate the appliance with a damaged mains power cable or mains plug or after the appliance or any attachment has been damaged. Seek qualified technicians for assistance.
3. Your appliance should be protected from moisture, e.g. condensation, splashed water, etc. Do not place or store your appliance where it can fall or be pulled into water or any other liquid.
4. To reduce the risk of electric shock, do not remove screws. The appliance does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
5. Always allow the appliance to cool down at least 30 minutes before switching to cool/warm mode.
6. Do not immerse the appliance or the mains power cable or plug in water or other liquids.

TECHNICAL DATA

Rated Voltage:DC12V
Rated power:40-50w
Rated Voltage:220-240V50-60Hz
Rated power:40-50w
Size Outer (W X D X H):410x330x420 mm
Size Inner (W X D X H):305x240x340 mm
Cooling Capacity:17°C Below Ambient Temperature
Heating Capacity:Heating Up to 50-65 °C
Inner Capacity:24L

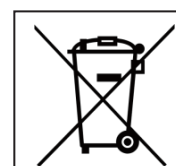


This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.
For more information, please contact your local authority.

7. The appliance must be placed on a flat stable surface and should not be subjected to vibrations.
8. Do not place the appliance on sloped or unstable surfaces as the appliance may fall off or tip over.
9. This appliance can be used by children aged 8 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, must have supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.

Children should not play with appliance. Cleaning and maintenance should not be made by children without supervision.

10. If the mains power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRODUCT OVERVIEW:

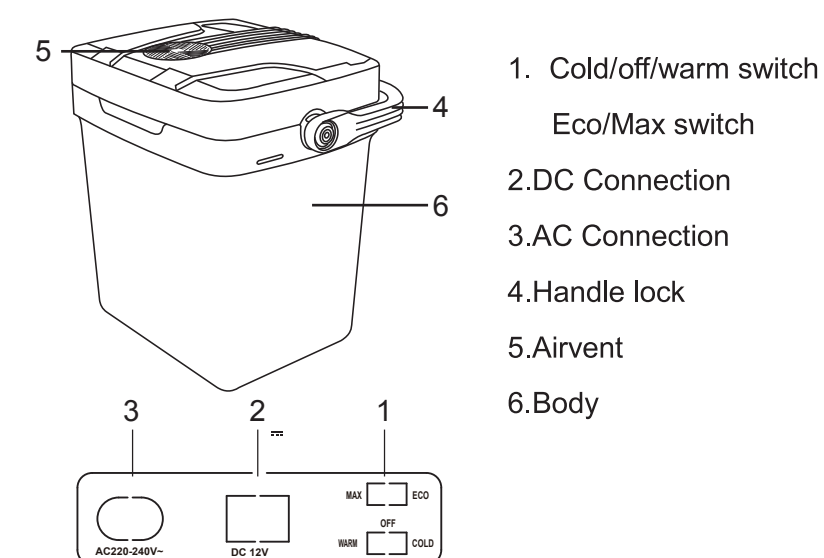

ABOUT YOUR PRODUCT:

Thermo-electric cool boxes provide you with cool items in the hot summer and a warming solution in the winter months

This lightweight cooling box can be handheld.

The ECO-CHILL possesses an integrated dual heating/cooling function through the use of a semi conductor, thus negating the need for a compressor or cryogen.

It is eco-friendly, lightweight and portable, as well as requiring very little power to run.

OPERATION:

Before connecting to the power supply, make sure the switch of the cooling box is in the OFF position.

NOTICE

Only use the cooler in a car or similar. Suitable for temporary use, for example, during a road trip.
Do not block the air vents on top of the lid.
Do not block the fan. If it stops spinning it is a fire hazard.
Do not switch between heating and cooling without turning off the cooler for at least 30 minutes. Open the lid and vent before switching.
The cooler must not be exposed to moisture or rain.
Do not pour liquid or place ice directly in the cooler.
Children should be supervised to ensure that they do not play with the appliance.

CLEANING

While cleaning the cooler box, turn it off and take out the plug. Use a damp cloth with a mild detergent.

STORAGE

If not used for an extended period of time, place in a well-ventilated area.